

Rinnai



リンナイ

RTL-35K

RTL-35KS

AUTOMATIC GAS COOKER


FOR L.P.G.

Better Feelings

OPERATING INSTRUCTION

CONTENTS	PAGE
● NAME OF PARTS	2
● SPECIFICATION	2
● CAUTIONS	3
● INSTALLATION	3
● OPERATIONS	4
● FLAME ADJUSTMENT	4
● MAINTENANCE	5

N A M E O F P A R T S

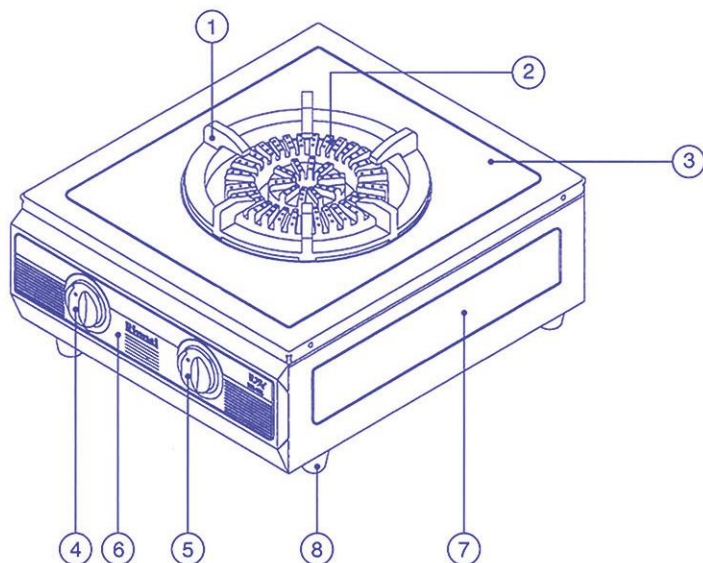

RTL-35K/RTL-35KS

- | | |
|----------------------|-----------------------------|
| 1. PAN SUPPORT | 6. FRONT DECORATION STICKER |
| 2. BURNER | 7. BODY CASING |
| 3. TOP PLATE | 8. RUBBER LEG |
| 4. LHS IGNITION KNOB | |
| 5. RHS IGNITION KNOB | |

S P E C I F I C A T I O N


MODEL	SIZE (m.m.)			INPUT (BTU/hr.)	WEIGHT (Kgs.)
	HIGHT	WIDTH	LENGTH		
RTL-35K/ RTL-35KS	200	360	480	22,800	9.0

C A U T I O N S

1. This cooker is used for L.P. GAS only.
2. Push a 3/8 " (9.5 mm) Rubber Tube completely on the Hose Connector and secure tightly with a Tube Clamp.
3. Peel off PVC Sheet covered Topplate before using.

I N S T A L L A T I O N

1. Keep your Cooker away from inflammable objects and walls.
2. Cooker to be placed on a stable and level surface.
3. Cooker needs minimum clearances from side/back walls of 15 cm. and from the ceiling 100 cm.

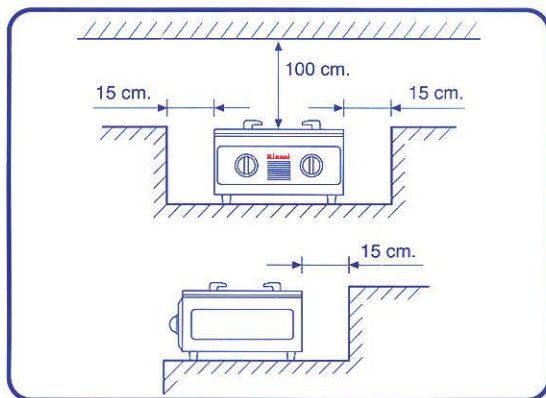

O P E R A T I O N S

1. Open Gas Valve on Gas Cylinder.

2. **LHS Ignition Knob : For Outer Flame.**

- Push and Turn the Knob Anti-Clockwise until you hear a "CLICK" sound, and check that burner ignites. The Burner will burn in MAX. capacity and can be turned down by turning the Knob (Not push) slowly back towards.

RHS Ignition Knob : For Inner Flame.

- Push and Turn the Knob Anti-Clockwise until you hear a "CLICK" sound, and check that the burner ignites. The Burner will burn in MAX. capacity and can be turned down by turning the Knob (Not push) slowly back towards.

F L A M E A D J U S T M E N T

At the first time of your using. If your burner flame condition seems too much air or not enough air, please adjust the Air Damper located under the Knob by

1. Take off the Topplate.
2. Use the Screwdriver to loose screws at the Burner.
3. Adjust the Air Damper to Left or Right Direction and observe the Flame as following:

**Proper amount of air:**

The flame is transparent blue and the difference between the inner flame and the outer can be clearly seen.

**Not enough air:**

The flame turns reddish and long burns like a candle.

**Too much air:**

The flame is short and flutters.

M A I N T E N A N C E A N D C A R E

1. Wipe the stainless steel parts with a dry cloth and if difficult to make it, use soapy water. Do not use the cleaning material (for example: scotch bright) which can scratch the coating of cooker.
2. Wash the Pan Supports in water.
3. Use a brush for cleaning the Burner.