


TROUBLE SHOOTING MANUAL FOR RINNAI RB-2GIF BUILT - IN GAS COOKER

Fault	Cause	Remady
1. No ignition	Spark electrode is wet especially in high humidity season.	Dry the electrode with clean tissue or dry cloth.
2. Flame cannot be held	Incorrect turning of gas control knob.	Push and turn gas control knob anti-clockwise until a "click" sound is heard. Hold for a few.
3. No main flame	3.1 Gas meter cock and/or appliance isolating cock have been turned off.	Open gas meter cock and/or appliance isolating cock completely.
	3.2 Burner head is blocked by aluminium foil.	Remove aluminium foil.
4. Yellow flame	Accumulated grease and dirt on burner head.	Wash burner head with warm water with detergent. Leave it on dry and place back in correct position.
5. Unstable flame	Incorrect location of burner head.	Refit burner head into burner body.

RB-2GIF(B)

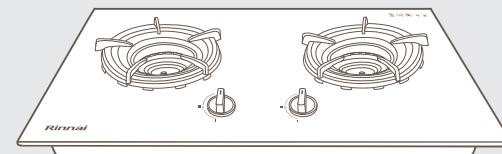


Gas Built in HOB

Instruction / Installation Manual

Rinnai

For the best results from your Rinnai gas cooker, please read the instruction give below carefully prior to operate the unit.

COMPONENTS AND NAMES

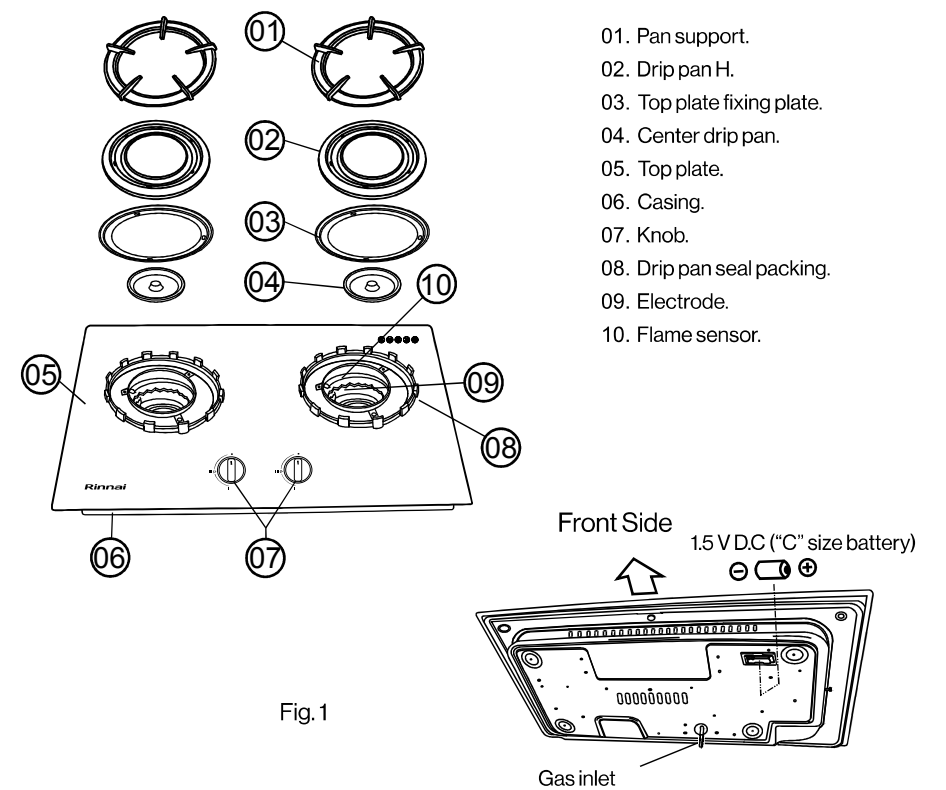

SAFETY MARK ON GLASS TOP PLATE

- Place the supporting trivets of the gas hob or cooker pan in the correct position.
- Do not place the cooker pan over the pan support side as it can cause turnbling.
- Never use oversized cooking utensils or overload the cooking appliances.
- Do not use the pointed bottom pans and remove the pan support and enclose the burner with a wok stand as this will concentrate and deflect the heat onto the gas hob.

* Wash the pan supports and drip pan, in warm water and detergent.

* In order to avoid dangerous situation arising from breakage of glass, do not apply heavy weight or strong impact on glass top plate (Fig.8).

* Do not make any scratch at the bottom side of glass, it will cause glass breakage during use.



Fig. 8

SPECIFICATIONS

Power supply	1.5 V D.C ("C" size battery)	
Gas consumption	L.P.Gas	7.0 kW
Gas Inlet connection	LP Ø 9,5mm	
Overall dimensions	Height	123 mm (Include pan support)
	Length	780 mm
	Width	450 mm
Net weight	14.3 kg	

8. Not very anxious signals:

- **Difficult ignition:** At the first use, there is full air in the gas hose. So, it is difficult to ignite. Please make ignitions a few times, then ignition will be successful.
- The sound "pup" when gas cooker is switched off, is very normal sound, please do not pay much attention.

HOW TO HANDLE SAFETY DEVICE AND CHANGE BATTERY

1. If the flame is extinguished during operation, the automatic flame failure safety device will shut the gas off after a short delay.
If you notice that the flame has been extinguished, please turn the knob to "OFF"
2. The safety sensor is delicate, it should always be kept clean and dry system and please do not use stiff brushes or rough cleaning pads for cleaning. (Fig 6).
3. Aeration is preset at Factory, Please do not attempt to adjust it.

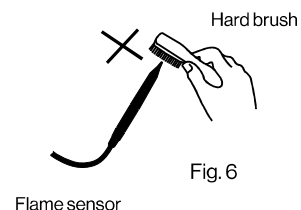


Fig. 6

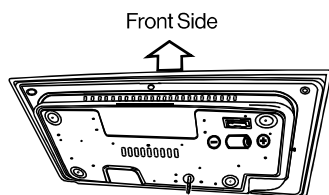


Fig. 7

* Battery Box is located at bottom of casing
(Size C, 1.5V x 1) (Fig.7)

Open the door of cabinet, and change battery

*Set battery correctly with care. ⊕ ⊖

MAINTENANCE

* Wipe the top plate with a soft, damp cloth, and mild detergent regularly, should not keep glass top plate too dirty because stains will affect the quality of glass surface.



Do not place anything, e.g., metal plate, air-shutter device, flame tamer on pan supports during cooking as serious damage to appliance may result.

Note: Maximum allowable diameter of pan is 26cm.

BENCHTOP CUT-OUT DIMENSIONS AND INSTALL BUILT-IN HOB INTO BENCHTOP


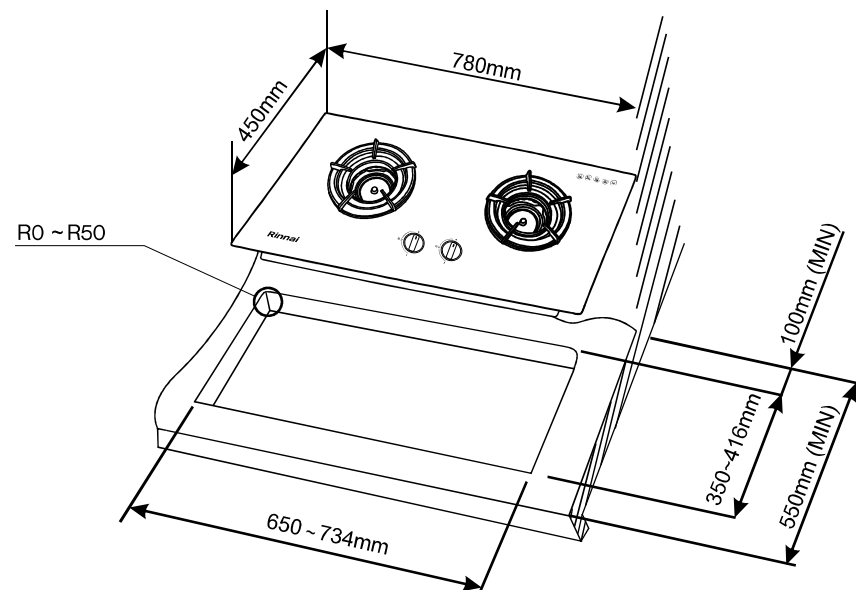


Fig. 2

The fixing screw x 4 pcs

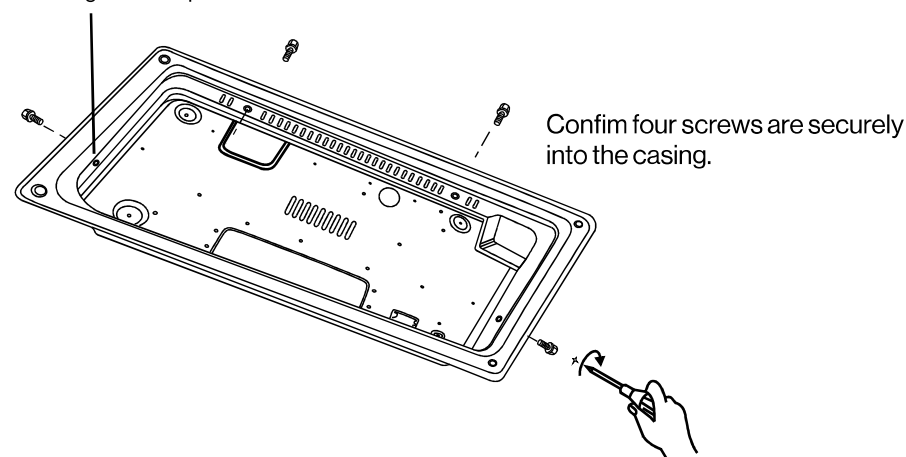

INSTALLATION

- * This built-in gas cooker is to be used for cooking only. Do not dry towels, clothes, etc, over it.
- * Install the built-in gas cooker in a well ventilated room and keep it away from any combustible or flammable objects such as paper or oil.
- * Place the built-in gas cooker on a stable and level surface.
- * If the built-in gas cooker is to be installed close to combustible objects (such as wooden walls, wooden shelves), it should be installed at least 15cm from the side walls. Even if the combustible material is protected by stainless steel sheet, a clearance of 15cm must be maintained too. If the surrounding material is fireproof, 15cm clearance is not required. The clearance between the appliance and above combustible shelves or the ceiling must be at least 100cm.
- * Make sure that the following parts are fitted properly before use.

PAN SUPPORT

- * Fit pan support legs into top plate. (Fig3)

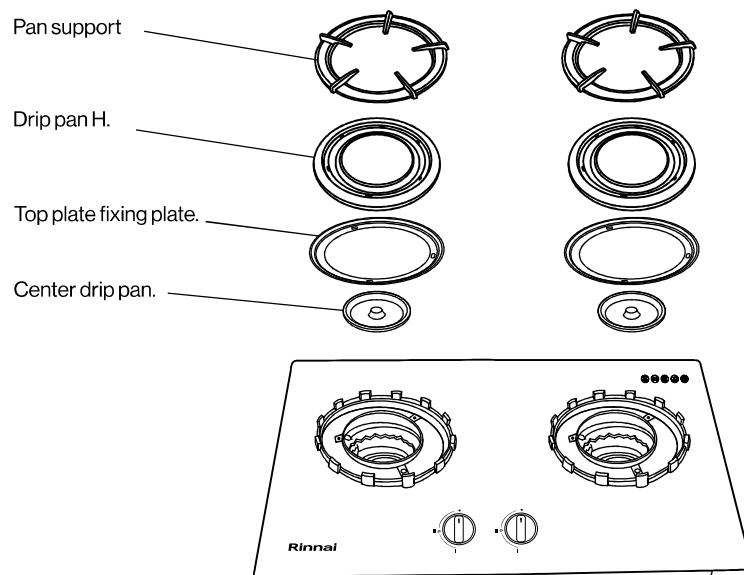


Fig.3

INSTRUCTION FOR USE

1. Pushing the control knob and turn it to the left (toward the "ON") position slowly until you hear a "click" sound, electronic spark will ignite to burner. Keep pushing the control knob for 7 seconds, the safety device will operate. If you release your hand halfway, electronic spark might not ignite to burners.
2. If the flame goes out when you release your hand, repeat the ignition procedure again, keep pushing the knob for a longer time and release your hand more slowly than last time.
3. Turn control Knob to adjust flame to desirable setting.
4. Flame can be adjusted between "ON" and "OFF". Please adjust flame slowly, should adjust the fire clockwise and counterclockwise. (Fig.4)
5. Adjust simmer flame between "ON" and "I". (Fig.4)

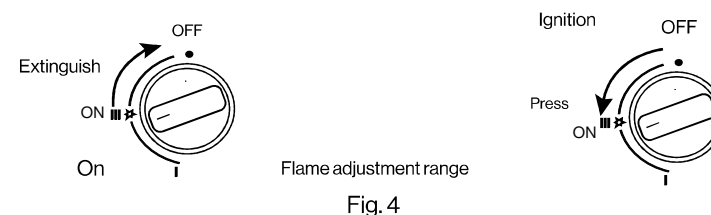


Fig. 4

6. Turn the ignition control the knob backwards to the "OFF" position to extinguish the burner.
7. Turn off valve of gas cylinder after cooking. (Fig 5)

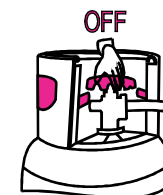


Fig.5