
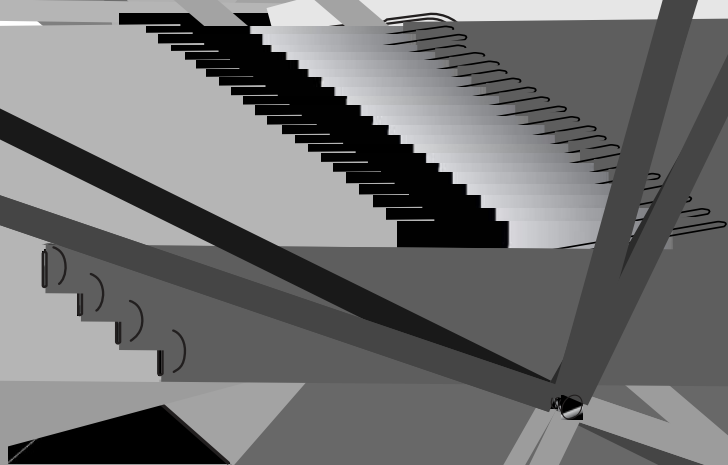
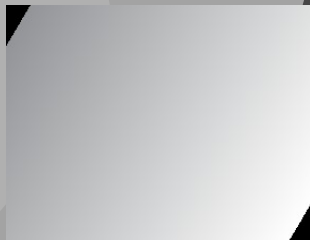


Use

Gas Grill

RG-440F

RG-640F

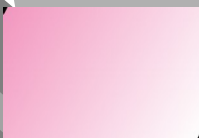


( RG-440F )


Index	Page
Cautions during use	1
Components	2
Features	3
Prior to use	4
How to use	5
Exterior specifications	7

## Cautions during use


**1** Must use designated gas

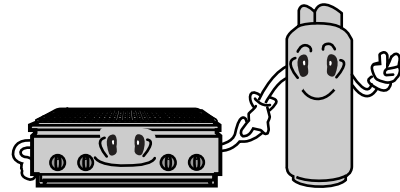


**2** Be careful not to touch the unit for children

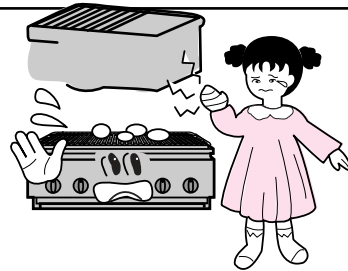


**3** Do not put flammable material around unit

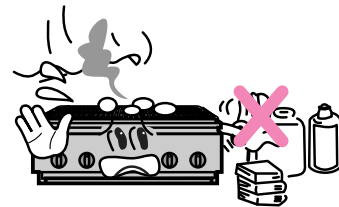


**4** Make the ventilation well during a operation  
it may cause a fire

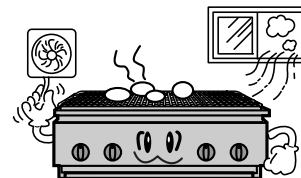


**5** Do not use a another purpose except  
for cooking  
it may cause a fire

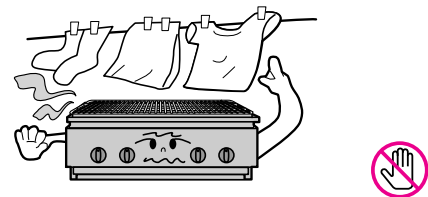


**6** Install the unit on even place

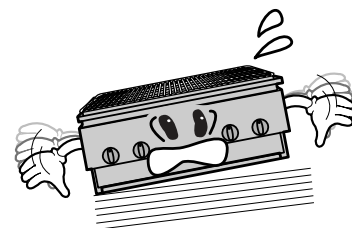

# Components

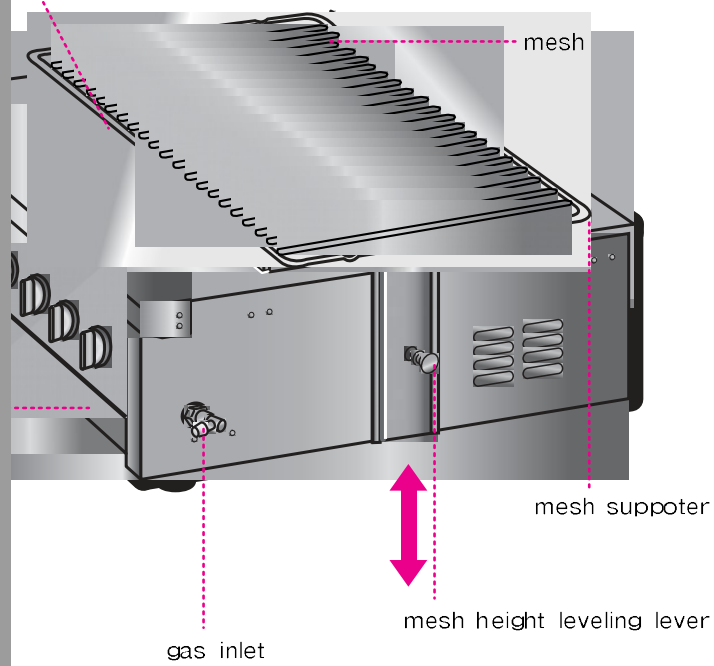


## Accessories

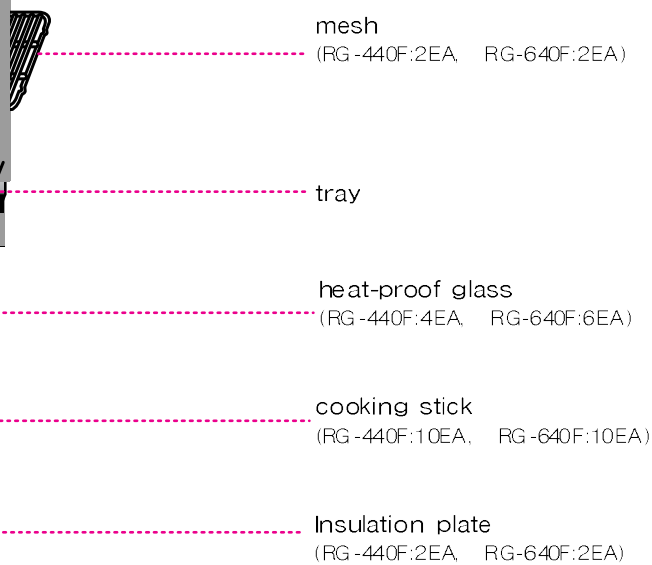

## Features

1. Infrared ray from ceramic plate of grill make the food more juicy and taste excellent
2. Fast and clean cooking
3. Offer various cooking(fish, meat, e.t.c) menu
4. High temperature and power flame make fastcooking
5. Keep the sharp of food after cooking and smell excellent
6. Economical running cost
7. Flame control (2 step), Adjustable mesh


- ※ Heat-proof glass  
Use the glass after cleaning  
Please clean the glass after cool down  
If you put the glass in the cool water before cool down  
It may be broken
- ※ It you have artifical hurts  
Please consult with doctot first

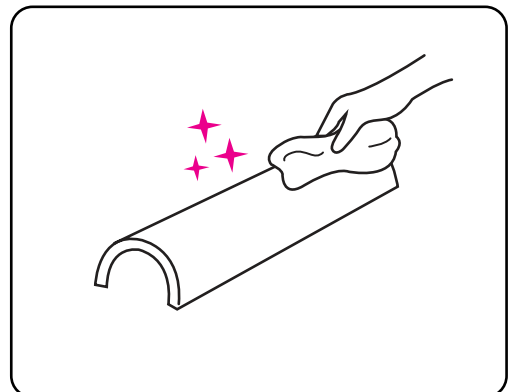

# Prior to use


1

- Check gas type

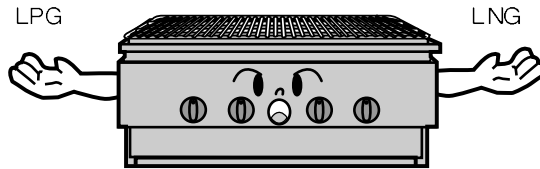


2

- Check the knob position "off"

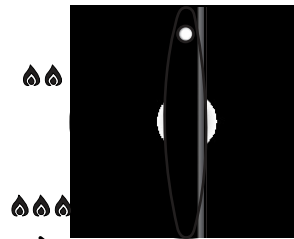


3

- Did you fill the tray with water  
Fill 2/3 of the tray with water  
If you use the unit continuously without water  
It may be deformed, fire or smoke

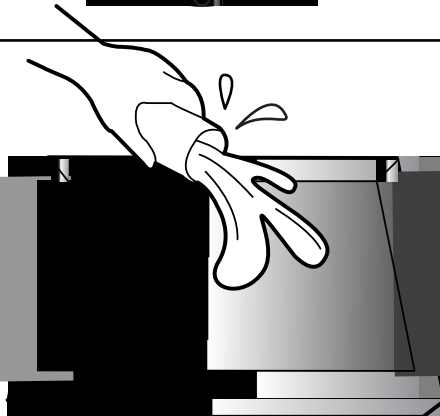

4

- Put the heat proof glass on the glass supporter  
Put the mesh on the mesh supporter

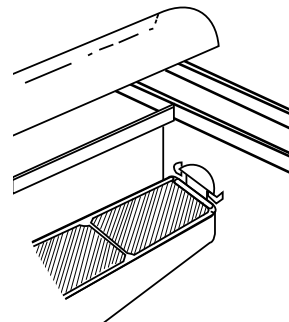

# How

## 1. On/Off Valve

- Please turn it slowly after checking knob position.

## 2. Ignition

- Push the ignition button and turn it to "ignition position" until it reaches "off".
- Take off your finger from the knob after fire "on".
- If ignition is failed



- If you turn the ignition knob with pushing action, it will not work.
- If you turn it fast it will not work.
  - when igniting at the first time, better turn to "off" several times to take air out.
- First time to use this product, please put 2 cups of water.
  - Then, turn the knob to "off" and wait.
- This is for burning out any gas that will be released when if you smell something or see smoke.
- Air adjustment
  - You don't have to adjust "air adjustment" knob.

## 3. Height Adjustment

- There are 4 levels to adjust.(15mm / each)
- You can choose height level depends on size of food and a kind of foods.
- Mesh supporter should be horizontal.
- You should fix it after height adjustment.

## 4. Flame control

- If you move the ignition knob from "Step 2" to "▲▲" it means weak flame
- "▲▲▲" means strong flame and ignition.

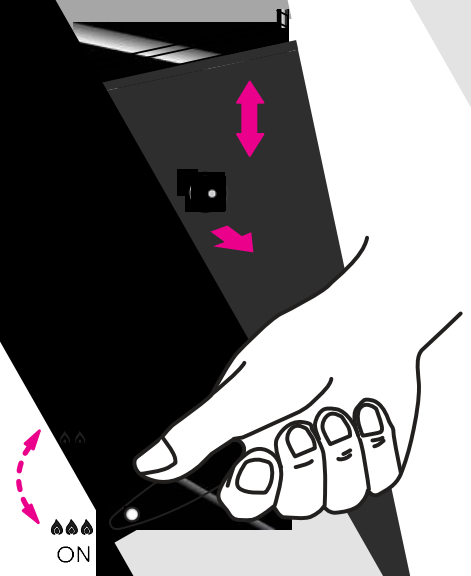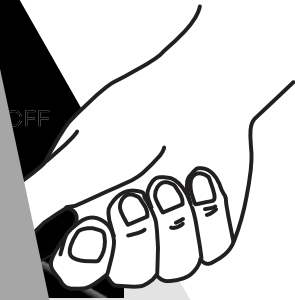


# How

... position  
... to any other position  
... must be reduced and in  
- You can also adjust heating  
of using gas infrared burner


## 5. Extinguishing

- Turn the ignition knob  
Then close the gas

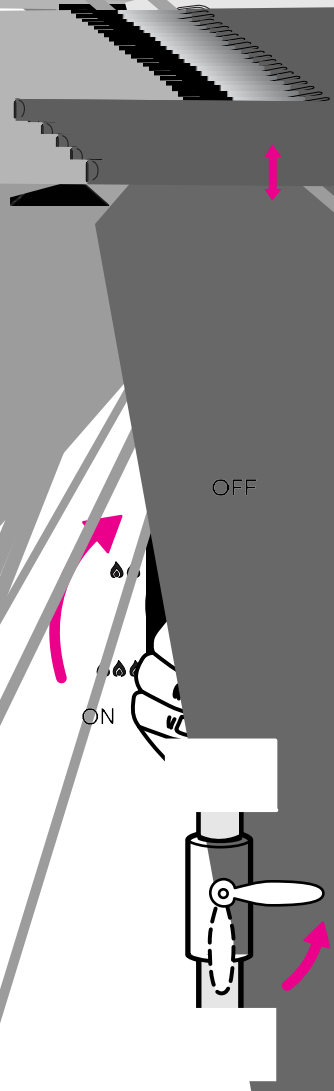

# Exterior specifications


## RG-440F

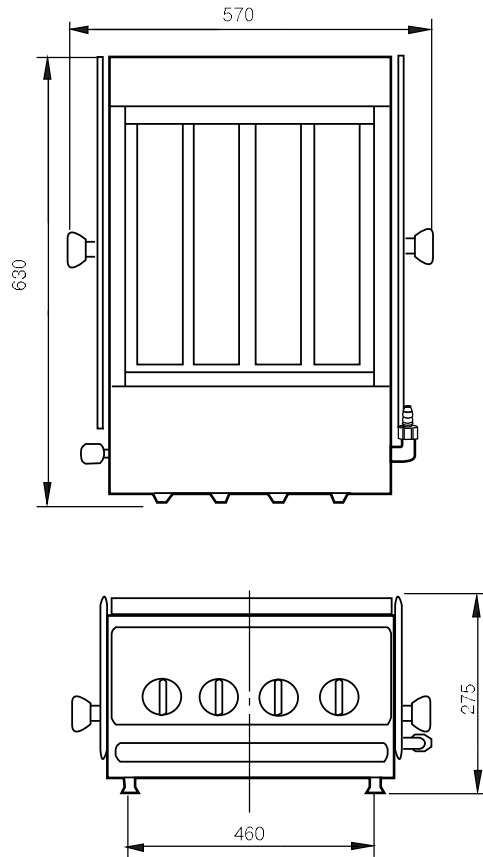

Description	Gas infrared Grill (Heating from Bottom)
Model name	RG-440F
Size(mm)	570 × 630 × 275
Weight	18 kg
Gas consumption	LPG - 0.68 kg/h, LNG - 8,400 kcal/h
Hose connection	φ9.5mm Designated Hose

# Exterior specifications

## RG-640F

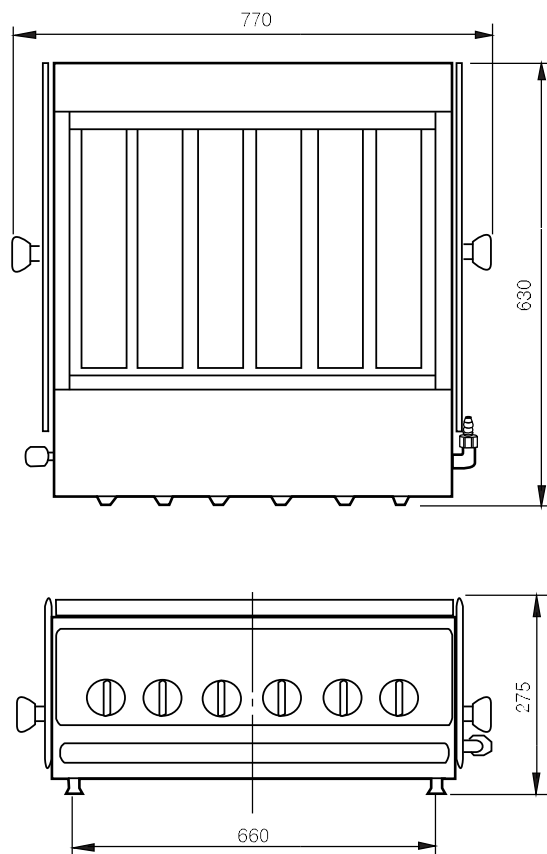

Description	Gas infrared Grill (Heating from Bottom)
Model name	RG-640F
Size(mm)	700 × 630 × 275
Weight	23 kg
Gas consumption	LPG - 1.0 kg/h, LNG - 12,500 kcal/h
Hose connection	φ 9.5mm Designated Hose

# MEMO

# MEMO

**Rinnai**

ver. 050214