
Note:
Product specifications are based on the nameplate. Manual content may vary due to improvements.

Scan QR code to access the official website of Rinnai

MODEL:
RR-606E

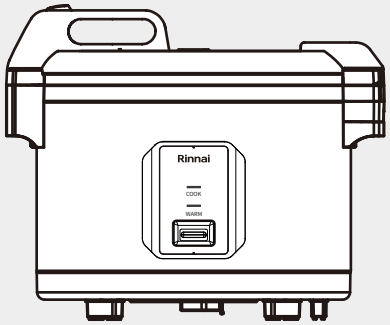

Electric Rice Cooker
Instruction Manual

Rinnai (M) Sdn Bhd
Company address: Unit 2-8, Subplace Boulevard, Pusat Komersil Vestland, No.6,
Jalan Juruanalisis U1/35, Seksyen U1, 40150 Shah Alam, Selangor Darul Ehsan, Malaysia
Tol Free :1800-88-8180 Fax:+:603 5038 8905
https://www.rinnai.com.my

Rinnai

Contents

Intended Use 1
Safety Information 1
Environmental Protection 3
Components' Name 4
Unique Features 4
Operation Instructions 5
Cooking Tips 6
Trouble Shooting 6
Care and Maintenance 7
Technical Specification 7

Thank you for choosing Rinnai Electric Rice Cooker
- Please read this manual carefully before use and keep it properly for future reference.
- Please fill in the model number, purchase date, purchase store, invoice number and other contents on the warranty card page carefully, and send the warranty registration card back to our company.
- This device must be installed by a professional.
- It should be used under the supervision of normal adults for special users (such as children, the elderly, disabled people, etc.).

! IMPORTANT

To register your product warranty, please paste the serial numbers stickers enclosed with the packaging on your warranty card.
Please contact your local Rinnai After Sales Service Center should you require further assistance.

Intended Use

Please read this user manual thoroughly before attempting to use this appliance for the first time. This manual contains important information on safe installation, use and care of the appliance. Keep these instructions for reference and pass them on to future user. This appliance can only be used safely if it is correctly installed according to the safety instructions, The installer is responsible for ensuring that the appliance works correctly at its installation location.
This appliance is intended for commercial use and indoor environment only. It is intended solely for the purpose of cooking and keeping rice warm. Do not use the rice cooker for other uses than its specific purpose. Do not leave the appliance unattended during operation. This appliance may be used by children over the age of 8 years old and by persons with reduced physical, sensory or mental capacity or by persons with a lack of experience or knowledge if they are supervised by someone who is responsible for their safety or have been instructed in how to use the appliance safely and have understood the risks involved in not using it properly. Children must not play with the appliance. Cleaning and user maintenance must not be performed by children unless they are over 15 years of age and are supervised. Keep children below the age of 8 years old at a safe distance from the appliance and power cable. Check the appliance for damage after unpacking it. Do not connect the appliance if it has been damaged during transport.

! The manufacturer is not liable for any damage which is caused by improper use or incorrect operation.

Safety Information

Warning - Suffocation
- Packaging material is dangerous to children. Never allow children to play with packaging material.

Warning - Risk of Fire
- Ensure that the power supply cord is free from any heat source or sharp objects.
- Multiple plugs and extension cables must not be used. Overloading is dangerous and may cause a fire.
- Do not operate appliance if cord has been damaged, or if appliance malfunctions or suffers serious damage.
- Never plug in the power cord without the inner pot inside the cooker.
- Do not let cord hang over edge of table or counter
- Do not block the steam vent on the top of the lid.

Warning - Risk of Burns
- Accessible parts become very hot when in operation. Never touch hot parts. Keep children at a safe distance.
- Appliance becomes hot during operation. Allow the appliance to cool down before cleaning.
- Allow appliance to cool completely before putting on or taking off pot.
- Use extreme caution when moving appliances containing hot oil or other hot liquids.

Warning - Risk of Injury
- Incorrect repairs are dangerous. Repairs should be attempted by our qualified technical personnel only. If the appliance is defective, unplug the appliance from the mains or switch off the circuit breaker in the fuse box. Contact your local Rinnai After Sales Service Centre for assistance.
- It is dangerous to modify any part of this appliance. Tampering with electrical connections or mechanical parts can cause operation faults and may put the user at risk.
- Do not use any high-pressure cleaners or steam cleaners, which can result in an electric shock.
- Penetrating moisture may result in an electric shock. Clean the appliance using a damp cloth only. Before cleaning, pull out the mains plug or switch off the circuit breaker in the fuse box.
- Components inside the appliance may have sharp edges. Wear protective gloves.
- Lighting emitted by the LED lights are very dazzling and can damage the eyes. Do not look directly into lighted LED lights for longer than 100 seconds.
- Always place the unit on a flat, level surface
- Rice cooker should be stored and operated away from high temperatures

Warning - Risk of Electric Shock
- A defective appliance may cause electric shock. Never switch on a defective appliance. Unplug the appliance from the mains or switch off the circuit breaker in the fuse box. Contact your local Rinnai After Sales Service Centre for assistance.
- Incorrect repairs are dangerous. Any repairs and replacements of damaged power cable or components should be attempted by our qualified technical personnel only. Contact your local Rinnai After Sales Service Centre for assistance.
- Penetrating moisture may result in an electric shock. Clean the appliance using a damp cloth only. Before cleaning pull out the mains plug or switch off the circuit breaker in the fuse box.
- Do not immerse cord, plug, or rice cooker heating plate in water or other liquid.
- Before plugging in power cord, ensure voltage rating of outlet is suitable for the equipment.
- Never put water or any liquid into the outer pot. Water should be placed only in the inner pot.
- Do not connect or disconnect the power cord with wet hands.

Warning - Cause of Damage
- Always switch on the appliance while cooking to avoid condensation. Condensation can produce corrosion damage.
- Always replace faulty lights to prevent the remaining lights from over loading.
- Do not clean the controls with a wet cloth as this may risk damage due to ingress of humility into the electronic circuitry.
- Clean all stainless steel surfaces in the direction of the grain only as incorrect cleaning may damage the stainless steel surface. Do not use any stainless steel cleaners.
- Never use strong and abrasive cleaning agents as this may cause damage to the stainless steel surface.
- There is a risk of surface damage if you do not peel off the protective film. Remove the protective film from all parts of the appliance before using the appliance for the first time.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities. or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons to avoid a hazard.
- There is a fire risk if cleaning is not carried out in accordance with the instructions.
- Do not heat cooking pot on any other stove.
- Only use the inner pot provided. Using other brands may cause damage
- The burn-proof pad should be placed on the inner pot. Do not put it on top of the electric heat plate, otherwise it will cause damage to this cooker.
- Do not use abrasive sponges and scrubbers that could scratch surface.

CAUTION: Accessible parts may become hot when used with cooking appliances.
Risk of fire or burn hazard. Do not store combustible material in container. To reduce the risk of electric shock, cook only in removable container. Risk of fire or electric shock. Only operate this appliance with the removable container in place.

WARNING: To reduce the risk of electric shock. Do not remove or open bottom cover.
No user-serviceable parts inside. Refer servicing to qualified personnel.
Any maintenance servicing should be performed by an authorized service representative.

Environmental Protection

Energy Saving
- This appliance and its packaging are environmentally friendly and recyclable. Please help us to care for the environment by disposing the packaging in a proper manner and recycling any old appliances.
- Before disposing an old appliance, disconnect it from the power supply and cut the power supply cord to prevent hazards.




In accordance with the2002/95 / EC, 2002 / 96 / EC and 2002 / 108/EC, certain hazardous substances are not allowed to be used on electronic equipment.

This symbol crossed out wheelie bin, on the product or in its packaging indicates that this product must not be disposed of with your other household waste.

Separate waste collection of this appliance is to be organized. It is the user's responsibility to contact the local waste disposal organizations for separate waste collection.
The separate collection and recycling of your waste equipment at the time of disposal will help to conserve natural resources and ensure that it is recycled in a manner that protects human health and the environment.

Components' Name

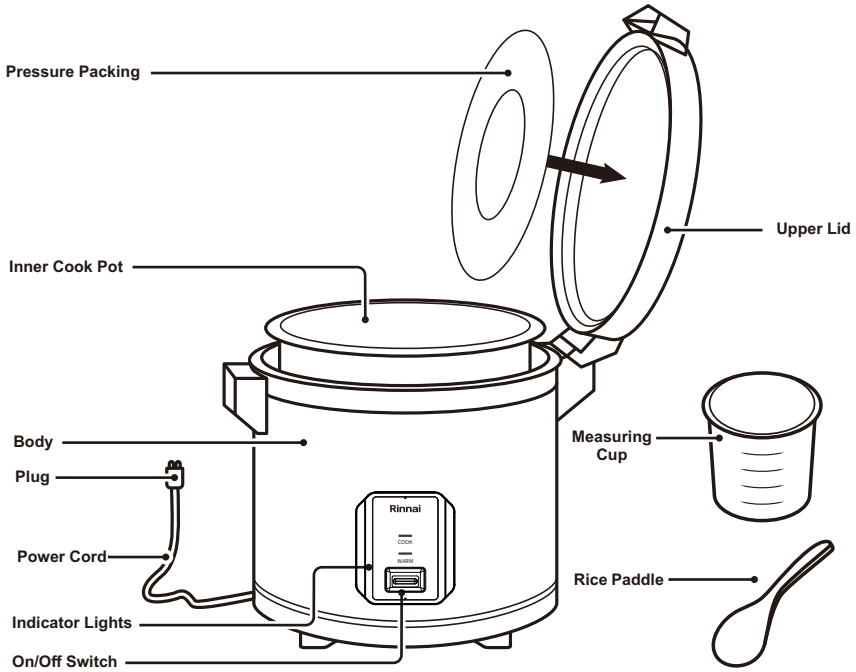

Unique Features


EASY ONE TOUCH OPERATION:
A simple ON-OFF control switch assures ease of operation.

AUTOMATIC SHUT-OFF AND WARMING FUNCTIONS:
When the rice is cooked, the rice cooker shuts off the switches automatically to the warm function.

Operation Instructions

NOTE: 1 cup raw rice yields approx. 2 cups of cooked rice.

1. First, rinse the raw rice in another container until the water runs clear.
2. Before putting anything in the inner pot, please read the cautions carefully and observe the following instructions:
   a) Wipe away any water outside the inner pot, then place the inner pot inside the cooker.
   b) Turn the inner pot left and right to make sure the inner pot is placed above the heating plate properly.
3. Add in proper amount of raw rice to the pot:
   a) Please use included measuring cup to measure the rice. One large 25 oz. measuring cup is included with this cooker and will hold 4 standard 6 oz. cups of rice. Follow the lines on the cup for exact measurements.
   For example: for 20 cups of rice, add 5 full measuring cups of raw rice to the pot.
   NOTE: This measuring cup is 4 times the size of a standard 6 oz. rice cooker measuring cup.
4. Add in the proper amount of water to the pot:
   a) Fill the pot with water to the proper graduation mark or follow the 1 cup rice to 1 cup water rule (approximate) and adjust to taste.
   For example: for 20 cups of rice, add water on top of 20 cups of rice up to the 20 cups graduation mark indicated on the water ruler on the inner pot.
   NOTE: Water amount may need to be adjusted according to different types of rice. Generally, 1 cup of rice requires 1 cup of water.

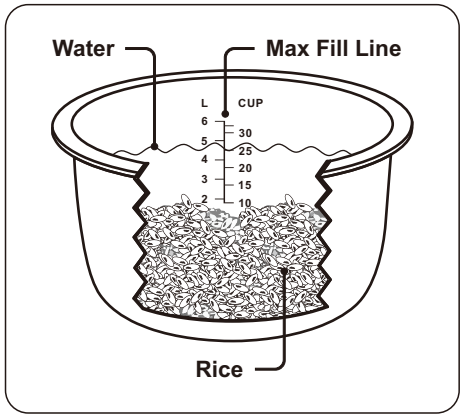

5. Place the lid on top of the pot.
6. Plug the power cord into the power outlet.
7. Press the cook switch down, you will see the “cook” indicator light go on.
8. After the rice has finished cooking, the unit will automatically switch to its warming mode.
9. Wait 15 minutes before removing the cover to allow the steam to continue cooking the rice.
10. Stir rice before serving.
11. When finished, turn the switch to OFF, and unplug the unit.

Cooking Tips

1. When washing rice, use warm water and wash lightly. Do not scrub with force. Pour out the water quickly and repeat the process 2 to 3 times until the rice is clear.
2. After the rice is washed, it should be immersed in water for 30-60 minutes before cooking.
3. The amount of water needed will depend on the type and quality of the rice. Generally, 1 cup of rice requires 1 cup of water.
4. For best results, do not warm rice for more than 12 hours.

Trouble Shooting

NO	SYMPTOMS	FAILURE CAUSE	APPROACH
1	The indicator light is not on	Power not connect	Check that the switch and socket are intact and connected to the power source.
2		Fuse damaged	Please contact your local Rinnai After Sales Center.
3	The indicator light is not on, but the heating plate works well	Indicator light damaged	Please contact your local Rinnai After Sales Center.
4	Rice is undercooked or burnt	Inner pot deformed	Replace the inner pot
5		Foreign body on the heating plate or the bottom of the inner pot	Remove any foreign objects.
6		Temperature limiter damaged	Please contact your local Rinnai After Sales Center.
7	Does not automatically keep warm after cooking	Temperature limiter damaged	Please contact your local Rinnai After Sales Center

If the above fault phenomena occur, please do not disassemble or handle the device by yourself; instead,Please contact your local Rinnai After Sales Center.

Care and Maintenance

1. Unplug the plug from the wall socket before cleaning. Wait until unit is cold to clean.
2. DO NOT immerse any part of the outer body into water.
3. Clean the outside of the rice cooker with a damp cloth.
4. Dry the outside of the rice cooker with a clean, dry cloth.
5. To clean the cooking pot, soak in hot sudsy water, then gently clean the bottom of the cooking pot with a dish cloth, rubber sponge, or foam sponge.
   • **BE CAREFUL** not to press down too hard, or drop anything on the bottom of the cooking pot, as this can cause warping and inhibit the proper functioning of the rice cooker.
   • **DO NOT use a rough cleaning tool as it will damage the nonstick coating.**
6. Unplug the water reservoir and dispose of the water contained therein.
7. Clean the inner pot with a damp cloth. Then clean the inner pot with a dry cloth again.
8. Make sure all parts are dry before storage.

Technical Specification

MODEL	**RR-606E**
POWER	**2000W**
Voltage	**220-240V~**
FREQUENCY	**50/60Hz**
Capacity (Raw)	**32 Cups**
Capacity (Cooked)	**64 Cups**
Weight (kg)	**10.33**
Length (cm)	**48**
Width (cm)	**41.1**
Height (cm)	**40**